


3. Set the working time period and frequency: press the " \bigotimes "button enter the setting 10 interface, as shown below: **PRODUCT MANUAL** Voltage: 12V Voltage: 12V Power: 11W Power: 15W 2.Select a time period _____ MON TUE WED THU FRI SAT SUN _____1.Select Week Capacity: 1000ml Capacity: 500ml 3.Adjust Start Time _____ 09:00 → 18:00 Weight: 3.5kg Weight: 4kg Coverage: 2000-3000m3 Coverage: 3000-4000m3 5.Adjust the number 6.Adjust pause seconds Size: 236*102*266mm Size: 288*105*274mm 07.Turn on the power 08.Set the time period / 09.Enjoy the Main interface for setting time period and working frequency III.Accessories Instruction (1)First: select the work day that needs to be set press the "(\triangle)" button to adjust the day V.How to use the equipment 0000 of the work day, press "(ENT)" to confirm and select the day of the work day, and press the " (www "button to return (Note: If the selected setting is Monday, then the setting of Q MON THE WED THU FRI SAT SUN Tuesday~Sunday remains the same as Monday, and this method can be used to guickly Spray nozzle event ™ * 88:88→88:88 888 ∕ 888 ≈ * (2)Second:select the set time period, press the " " button to adjust the time period, a Atomizer head total of 5 time periods, press the "D" button to move the cursor to select, press the "D" button to return; - **D** (3)Third:set the working time period and working frequency, press the " (2) " button to Power Outlet quipment switch adjust the value, press the "D" button to move the cursor, and press the " " button to I .Cautions (The following basic safety precautions should be always complied with) Fragrance oil bottle (4)Fourth:after all these setting,press the " (Ext) " button to confirm the setting Avoid casualties and property loss, please always follow the attentions as the following. Confirm increase **4. Set the local time and Day:** press the " (Δ) " + " (\triangleright) " button at the same time, as shown INSTALLING 1.The turn on/off interface is shown in the image below, and it takes two seconds to below .Do not use unsafe plug or powe turn on: \triangle MON TUE WED THU FRI SAT SUN Current Day Do not install the device at the place where children can touch. MON THE WED THU FRI SAT SUN not install the device at the place where can not bear strength and pr Note IV.Operation Introduction ult in falling and collapsing. Do not tilt the device. Keep the device away from fire and heat source, prohibit to store flamma 888 / 888 * * nd explosive materials around the device. May cause electric shock 6.Except for the atomizer, the housing material is not resistant to corrosio 7.Do not use device in high temperature or wet environment. 8.Do not use inflammable, explosive, corrosive and other hazardous s Time setting interface 9 Device startup interface Press the " ((a)" button to adjust the value, press the " ((b)" button to move the cursor, then rk with the device. 2. Display on the main interface of the device: the Current Working Day: Local Time: press the " () button to complete the setup. Working Time Period; Work/Pause Seconds; The Atomization / Fan Icon, WIFI and Bluetooth Connection Status icons. 5. Set the password of the device: press the " (way " + " (evr) " at the same time to enter **Ⅲ.Product** Feature As shown below 01.Choose one favorite oil 02.Open the equipment lock the interface of the password setting, as shown below: 03.Remove the bottle and the atomization head Working Time Period - 12 34 12 34 2.Enter the password again to confirm 3 MON TUE WED THU FRI SAT SUN _____ Select Current Working Day 1.Input password -Voltage: 12V EVENT * * The Atomization / Fan The Atomization / Fan Icon Power: 4.5W Local Time 000 Capacity: 300ml Weight: 2kg Password setting interface Coverage: 500-800m3 (1)Enter the four-digit password for the first time, press the " \bigtriangleup " button to adjust the Pause Seconds Size: 180*79*254mm 06.Plug in the power cord 04. Pour the essential 05.Screw the bottle on value, and press the " " button to move the cursor; tomization head ,then put it back into machine oil into the bottle (2)Enter the four-digit password for the second time, press the " (2)" button to adjust the Display on the main interface of the device

*For terms and conditions on our products see www.luxuryair.co.uk

LXS600 Manual

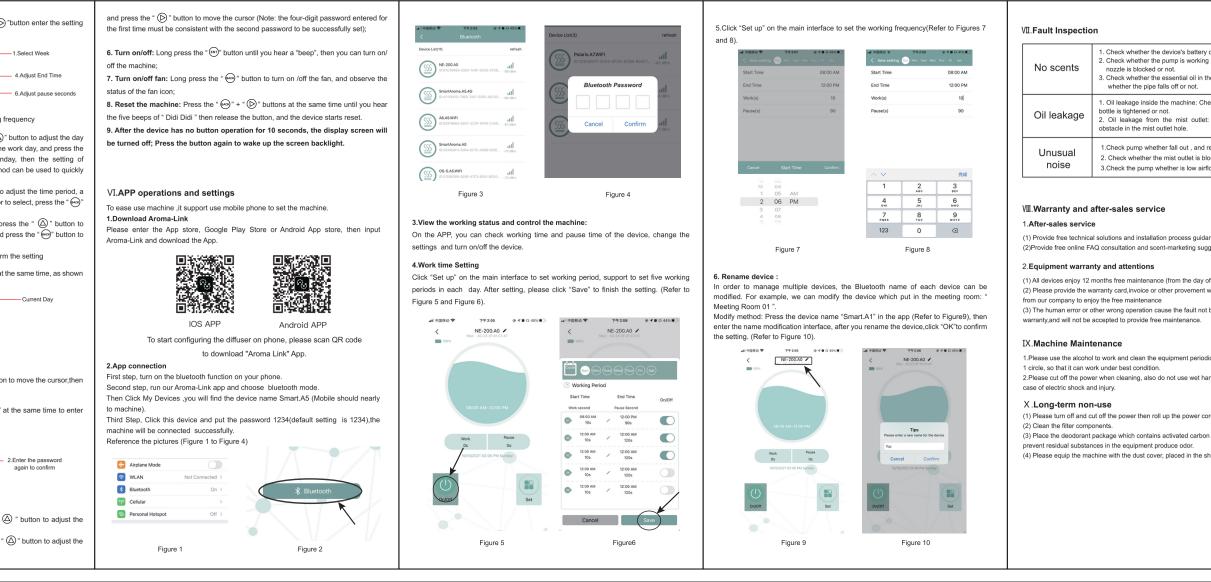

600*1

or powered on or not. or not and whether the
ne bottle is ran out or not and
eck whether the essential oil
: Check whether there are
re-install the air pump. bocked by obstacle. low and low pressure.
Ince gestion
of purchase). which can prove it ordered
belong to the scope of
ically, suggest 2-3 months in
ind to operate it directly, in
rd.
n in the device or package, to
hade, ventilative place.
1/10mm